

INSTRUCTION MANUAL

FLEX BOUNCER



English 	3 - 4

# ! IMPORTANT

KEEP INSTRUCTIONS FOR FUTURE REFERENCE.
ALWAYS READ INSTRUCTIONS CAREFULLY BEFORE USE.
YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DON'T
FOLLOW THEM.

# ! WARNING

- Important Read carefully and keep for future reference
- Never leave your child unattended.
- Do not use the reclined bouncer once your child can sit unaided.
- This reclined bouncer is not intended for prolonged periods of sleeping.
- It is dangerous to use this reclined cradle on an elevated surface, e.g.a table.
- The maximum weight of the child for which the reclined cradle is intended, that is 9 kg; this requirement does not apply to carseats complying with ECE 44.
- Remember that the product was built so that your child's own movements make it rock. Make sure that older children are not allowed to rock the baby to forcefully.
- This reclined cradle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
- Do not use the reclined cradle if any components are broken or missing.
- Do not use other accessories or replacement parts than those approved by the manufacturer.
- Suffocation hazard: Never use on a soft surface (bed, sofa, cushion), as seat may tip over and cause suffocation.
- Never use the toy bar to carry the product.
- Never carry the child when he/she is in the product.
- An adult must assemble the product.

#### HOW TO WASH THE FABRIC

To wash the fabric seat, loosen the two elastic loops at the bottom and pull it off the frame.

Wash separately, warm 40°C. Do not tumble-dry and do not use solvents, abrasive or aggressive products.











#### **TECHNICAL INFORMATION**

# Height/length/width:

Highest position:  $58 \times 66 \times 46$  cm Transport mode:  $12 \times 83 \times 46$  cm

# Fabric collections:

Seat fabric: 100% cotton

Toys fabric: 100% polyester A. Frame

### **COMPONENTS**

A. Frame

B. Fabric cover

C. Toy bar (accessories)

A1. Base frame

A2. Seat tube

A3. Back supporting frame


A4. Back rest adjustment machanism

A5. Red lock for folding

B1. Safety harness

B2. Crotch pad

C1. Toys (accessories)

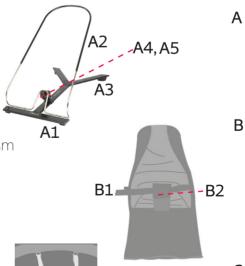

#### **BACK REST RECLINE ADJUSTMENT**

 
Lift up the back rest recline adjustment (1.1), has three positions adjustment,

shown as (1.2), Remark: Adjust the recline from lowest position to highest position, only lift up the backrest directly with one hand.



#### **FOLDING THE BOUNCER**

In order to store the bouncer easily or for transportation. Pls follow up below steps to fold it: Folding the seat, need to lift up the backrest first with right hand (2.1), upwards the backrest adjustment mechanism with left hand (2.1), when reach the lowest position, lift up the red lock (A5), then fold the seat, shown as (2.2).

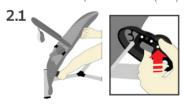



**WARNING**: In order to fold the bouncer for storage or transportation the secondary safety lock must be pressed and activated.

## **REMOVABLE LINING**

Disassemble the elastic loops on the bottom of the seat on both sides. (1.1). Then pull out the removable fabric lining from the seat frame (2.1). Pay attention not to damage the lining.

1,2



2.1



#### **POSITIONEN**

The MAST FLEX BOUNCER has three positions. The lowest position, "Dream", is recommended for newborns sitting in the bouncer. Positions "Relax" and "Bounce"can be used when the child can hold his or her back and head upright in these positions without a problem.

The MAST FLEX BOUNCER can be used for newborn until your child has learned to sit up without help. As soon as your child can walk and sit on his or her own, you can turn the fabric around to create a cozy chair without the safety harness.

### MAXIMUM WEIGHT FOR EACH POSITION

## Highest position: "Bounce"

- used as a bouncer up to: 9 kg
- used as a chair up to: 13 kg

#### Medium position: "Relax"

- used as a bouncer up to: 9 kg
- used as a chair up to: 10 kg

# Lowest position: "Dream"

- used as a bouncer up to: 7 kg
- used as a chair up to: 7 kg

# Transportation mode: "Transport"

- when the product is not being used

### **BOUNCER OR CHAIR**

## Bouncer (max. 9 kg)

Always use the restraint system. Make sure that both buttons are locked. You can adjust between two positions. Stop using the product as a bouncer once your child can sit up without help.

## Chair (max. 13 kg)

Use as a chair when your child can walk and sit on his or her own. In order to convert the product into a chair, all you have to do is turn the fabric around.

